

Mini Hi-Fi component system

Brand	Code No. for each section			
	Receiver	CD	Tape	MD
Sony	001	001	001	001
	002	001	001	001
	003	002	002	
	003	002	003	
Admiral	095	085		
Aiwa	022	021		
	023	022	019	
	040	037	029	
	079	074	054	012
Akai	074	068	050	
BERMSTER	053	049		
B&O(Bang&Olufsen)	068	063	043	
BUSH	064	061		
	065	061		
CARVER	048	045		
Crown	062	059		
Daewoo	005	003		
Denon	010	008	007	
	028	009	021	
	028	009	008	
	024	023	020	
	037	009	021	003
Garrard	058	054		
Goodmans	061	057		
Grundig	021	020		
	017	016	015	
	062	058	041	
	075	069	051	
Harman/Kardon	035	090		
Jensen	061	085	024	
JVC	019	018	017	005
	020	019	018	
	070	018	044	
	019	018	044	005
	078	073	053	008
Kenwood	015	014	013	
	016	015	014	
	025	034	026	
	025	024		
	071	065	047	014
	071	065	013	014
	083	077	056	011
	083	078	057	014
LG/Goldstar	009	007	006	
Marantz	017	016	015	
	029	039	015	
	094	016	035	
Matsui	062	058	041	
	060	056	041	
	076	070		
McIntosh	097	090		
MISSION	059	055	040	
Onkyo	034	035	027	
	034	030	027	
	084	079	058	015
Panasonic	008	006		
	008	005	049	
	077	072	052	010
	099	094		
Philips	017	016	015	
Pioneer	006	004	004	
	090	028	025	
	018	017	016	
	006	017	004	
	018	017	004	
	072	066	048	
	081	076	055	016
QUADRAL	049	046	034	
RCA	091	080	063	
SABA	041	042		
Samsung	042	043		
Sansui	087	083	059	
Sanyo	011	010	009	
Sharp	037	009	021	003
	016	015		
	028	009	021	
	028	009	008	
	080	075		013
	100	095		
Sherwood	012	011	010	
	013	012	011	
Sohneder	069	064	045	
Sounde-sign	096	087		
T+A	063	060	042	
Teac	055	050	047	
	087		059	
	087		060	
Technics	007	005	005	
	008	005	049	
	045	025	032	
	026	032	005	
	073	066	048	
Toshiba	101	096		
UHER	051	047	036	
	052	048	037	
Universum	054	050		
	055	050	038	
	056	051		
	057	052	039	
	057	053		
Yamaha	014	013	012	
	030	027	012	
	030	027	022	
	030	027	046	
Wharfedale	058	054		

Separate Components

Receiver	
Brand	Code No.
Sony	001 002
Admiral	095
Aiwa	022 023 040 079
Akai	074
B&O(Bang&Olufsen)	068
BERMSTER	053
Bush	064 065
CARVER	048
Crown	062
Daewoo	005
Denon	010 024 027 028 036 037
FINEARTS	044
Goodmans	061
Grundig	075 021
Harman/Kardon	035
JVC	019 020 047 070 078 098
Kenwood	015 016 025 071 082 083
LG/Goldstar	009
Magnavox	021
Marantz	029 094
Matsui	060 062 076
McIntosh	097
MISSION	059
NAD	103 033
Nakamichi	104 087 086
Onkyo	034 039 043 084
Panasonic	008 077 099
PARASUND	066
Philips	017
Pioneer	006 018 032 072 081 085 090
QUADRAL	049
RCA	105 091 092 093
REVOX	050
Rotel	067
SABA	041
Samsung	042
Sansui	086 087 089
Sanyo	011
Sharp	028 037 080 100
Sherwood	012 013 031
Sohneder	004 069
Sounde-sign	096
T+A	063
Teac	088
Technics	007 026 045 073
Toshiba	101
UHER	051 052
Universum	054 055 056 057
WEARFEDEALE	058
Wharfedale	058
Yamaha	102 014 030 046

MD Deck

Brand	Code No.
Sony	001 002 019 (DAT)
Aiwa	012
Akai	018
Denon	003
JVC	008
Kenwood	004 011 014
Marantz	007
Onkyo	015 020 (DAT)
Panasonic	006 010
Pioneer	016 020 (DAT)
Sansui	009
Sharp	013
Teac	005
Yamaha	017

CD Player

Brand	Code No.
Sony	001 002
Admiral	085
Aiwa	021 022 037 074
Akai	068
B&O(Bang&Olufsen)	063
BERMSTER	049
Bush	061
CARVER	045
Crown	059
Daewoo	003
Denon	008 009 023 026
Emerson	091
Fisher	040
Goodmans	057
Grundig	020 069
Harman/Kardon	031
Hitachi	041
Jensen	084
JVC	018 019 033 073
Kenwood	014 015 024 034 065 077 078
LG/Goldstar	098 007
Magnavox	016 026
Marantz	071
Matsui	056 058
McIntosh	090
MISSION	055
NAD	029
Onkyo	030 035 038 079
OPTIMASU	092
Panasonic	006 072 094
Philips	016
Pioneer	004 017 028 067 076
QUADRAL	046
RCA	080 081
SABA	042
Samsung	043
Sansui	082 083 086
Sanyo	010
Sharp	075 095
Sherwood	011 012 039
Sohneder	065
Sounde-sign	087
T+A	060
Technics	005 025 032 067
Toshiba	096 097
UHER	047 048
Universum	062
WEARFEDEALE	054
Yamaha	013 027 036

DVD

Brand	Code No.
Sony	001 024
Aiwa	015
Denon	006 017
Harman/Kardon	018
Hitachi	008
JVC	007
KLH	010
Onkyo	016
Panasonic	002
Philips	012
Pioneer	004 019 021
RCA	005
Sharp	011
Shinco	022
Samsung	014
Sylvania	020
Thomson	013
Toshiba	003
Yamaha	006
Zenith	009

Cassette Deck

Brand	Code No.
Sony	001
Aiwa	019 029 031 054 066
Akai	050
B&O(Bang&Olufsen)	043
Denon	007 008 020 021
Grundig	051
Harman/Kardon	024
JVC	017 018 044 053 056
Kenwood	013 014 026 056 057
LG/Goldstar	006
Marantz	033
Matsui	041
MISSION	040
NAD	023
Nakamichi	069 061
Onkyo	027 028 030 058
Panasonic	052
Philips	015 068
Pioneer	004 016 025 048 055
QUADRAL	034
RCA	063 064 065
REVOX	035
Sansui	061
Sanyo	009
Sharp	067
Sherwood	010 011
Sohneder	045
T+A	042
Teac	047 059 060 062
Technics	005 032 049
UHER	036 037
Universum	038 039
Yamaha	012 022 046

Analog Satellite receiver

Brand	Code No.
Sony	001 042
ADB	062
Amstrad	024 002 023 059
Galaxis	026 031 010 012 014
Grundig	026 027 035 065
Hyundai	044
Jerrold	038
Kathrein	022
Matsui	025
Nikko	021
Nokia	037
NTV plus	040
Pace	016 020 060 061
Radix	024 011
SABA	028 032 033 008 009 047 070
Sky Master	003 006 005
Technisat	034 018 019 045 066
Thomson	032
Watson	004
Zehnder	007 013 050 068 069

Digital Satellite receiver

Brand	Code No.
Sony	057
Amstrad	046
CANAL+	006 042
Galaxis	030 053 072
Gold box	036
HIRSCHMANN	063
Kathrein	043 049
Nokia	017 056
Pace	015
Panasonic	067
Philips	054
Radix	029 052
Technisat	039 051
Thomson	071
TPS	055
Zehnder	048 064

Analog Cable box

Brand	Code No.
Hamlin/Regal	022 023 024 025 026
Jerrold/G.I	001 002 003 004 005 006 007 008 018 043 022
NET	042
Oak	027 028 029
Panasonic	019 020 021
Pioneer	014 015
Scientific Atlanta	009 010 011
Tocom	016 017 043
Zenith	012 013